


A1 FO Field SC

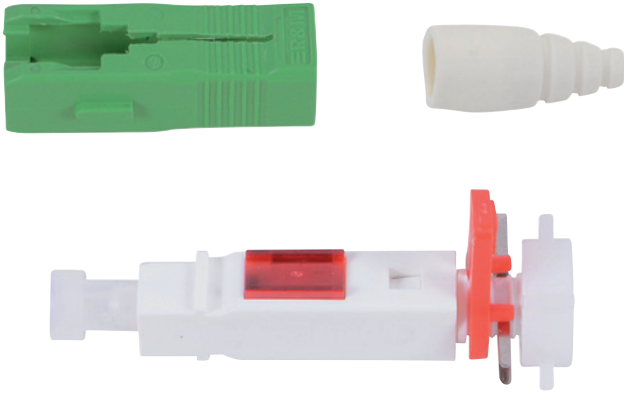

021.3162 / 021.3163 / 021.3164


A2

Ader / tube

All 600µm,
 900µm semi-tight &
 loose-tube buffer



Loose Tube

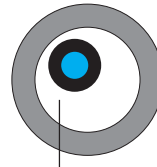


Coated Optical Fiber

Ader / tube

900µm tight buffer




Tight Buffer

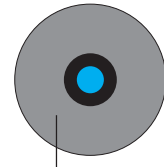

Buffer Layers
 Apply Directly Over Fiber Coating

021.3456 / 021.3457

A3 Kontrolle / Control

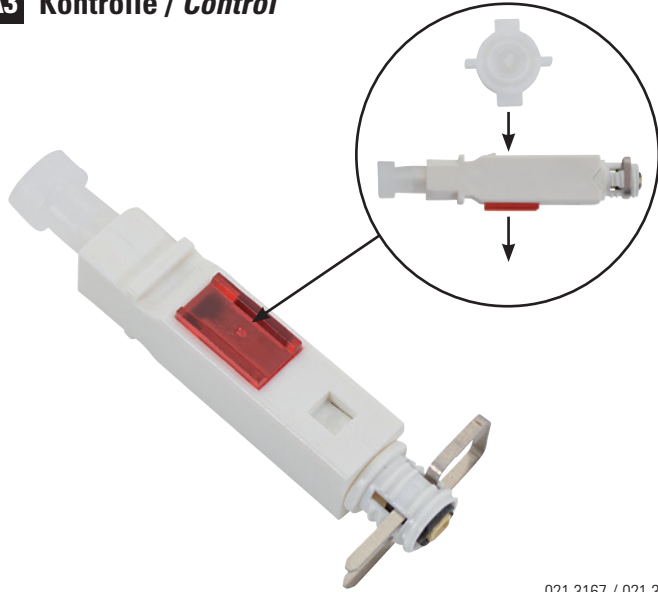


021.3167 / 021.3168

A4 Prüfmittel / Testing equipment

Adapter & Red
 Light Source
 R504313




Adapter
 1.25mm und 2.5mm
 R823872

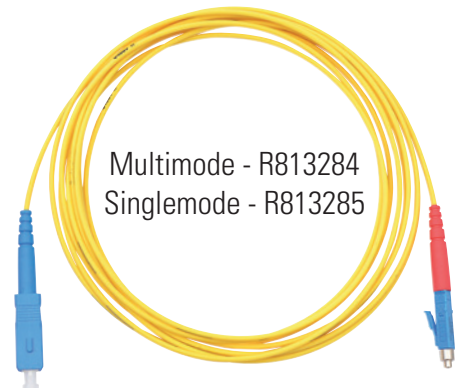

Multimode - R813284
 Singlemode - R813285


021.3017 / 021.3150 / 021.3161

A5

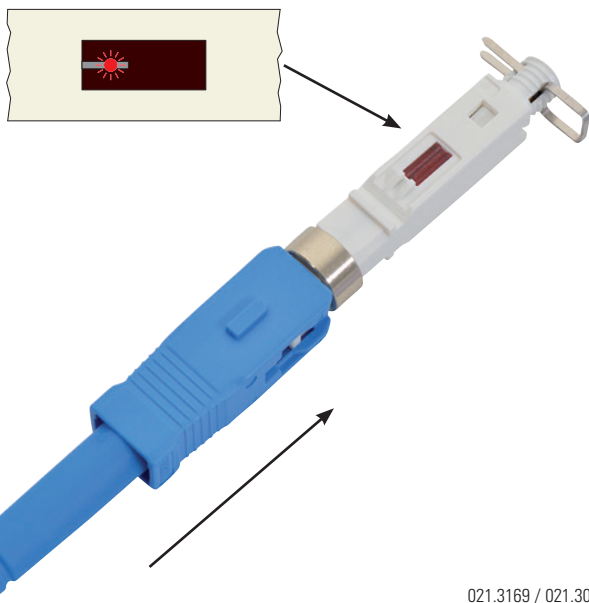

021.3169 / 021.3019

B1

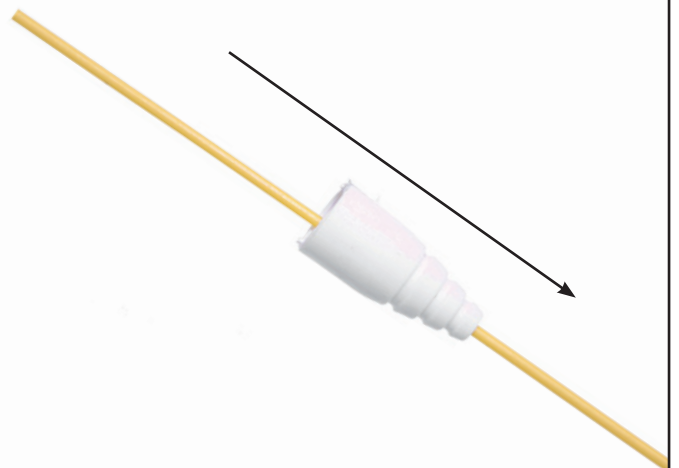

021.2697

B2

gin: E-Nr:

1064

il preparation

mark 7 10 ~ 30 cleave

(125µm)

Reichle & De Massari AG Certified Management S
www.rdm.com ISO 9001/2008

021.3029

B3 Reinigen / Clean

FIS
ALCOHOL
Pre-Moistened Wipe
Fast evaporating Alcohol
Pre-Moistened Wipe cleaner for use
with optical fiber to remove dust, dirt
and oils. Non-bleeding, non-abrasive,
pre-moistened wipe.
1.800-500-0347
www.fiberrecovery.com

021.3151 / 021.3152

B4 Faser zurück stossen / Push fiber back

021.3152 / 021.3453 / 021.3154

B5 Optional

~ 150 mm

Klemmtool / Grip tool
R812786

021.3158

B6 Cleaven / Cleave







8° ANGLE CLEAVER

10 mm


021.3151 / 021.3152 / 021.3153

B7

021.3019 / 021.3170

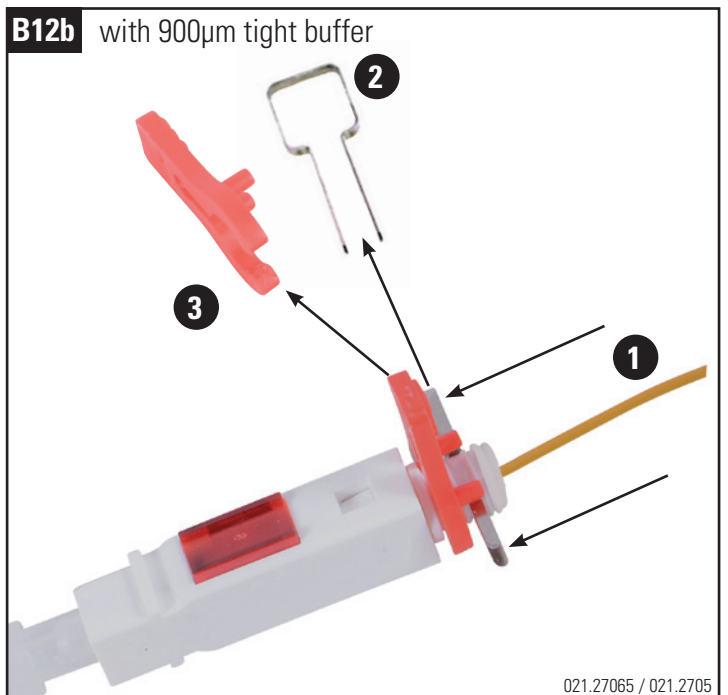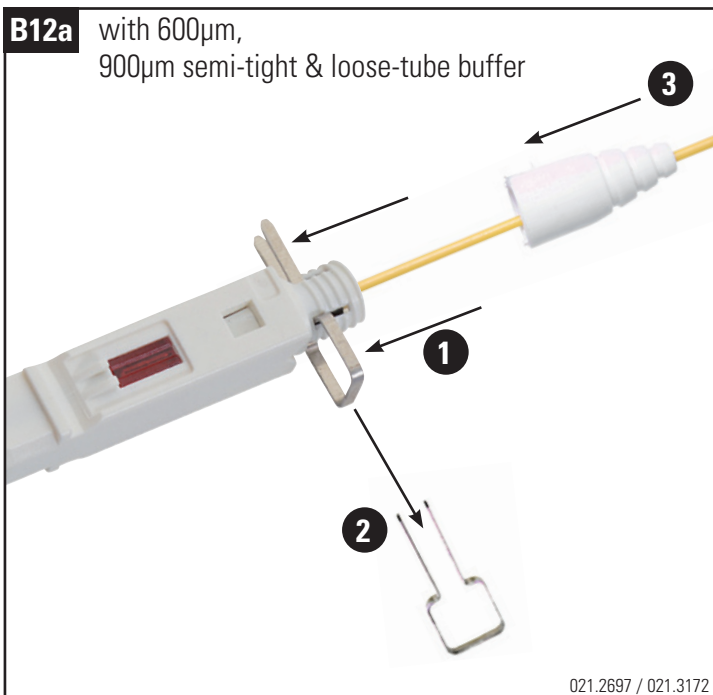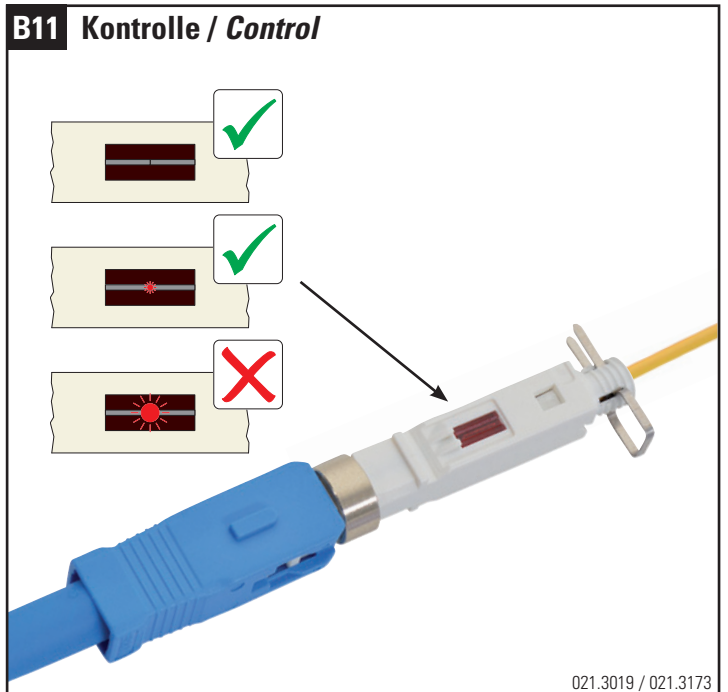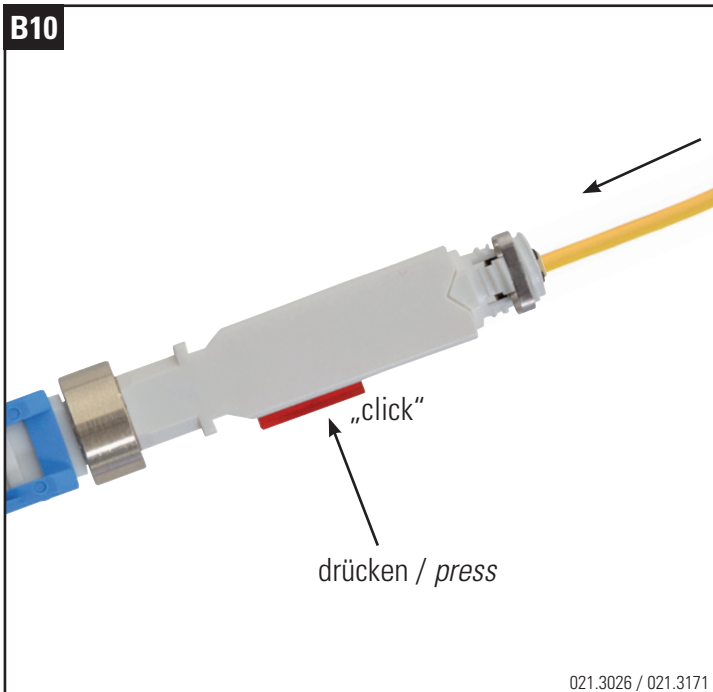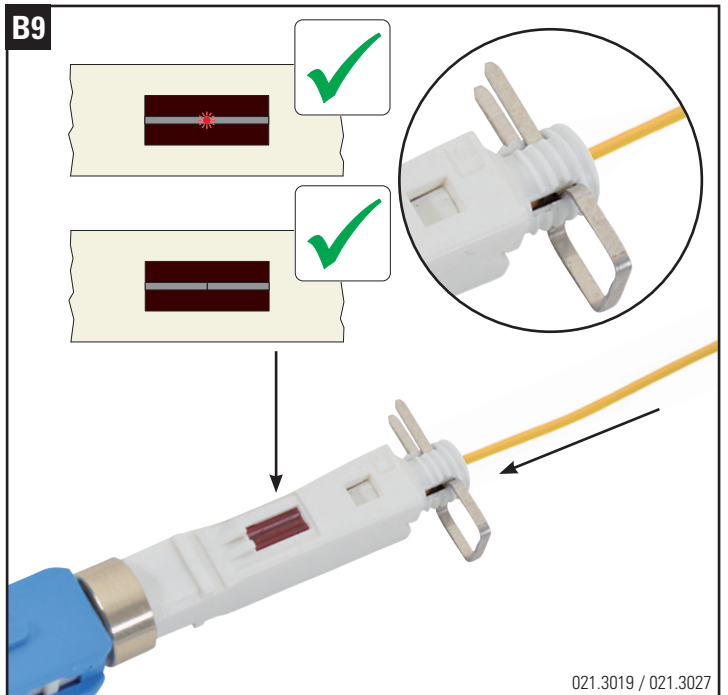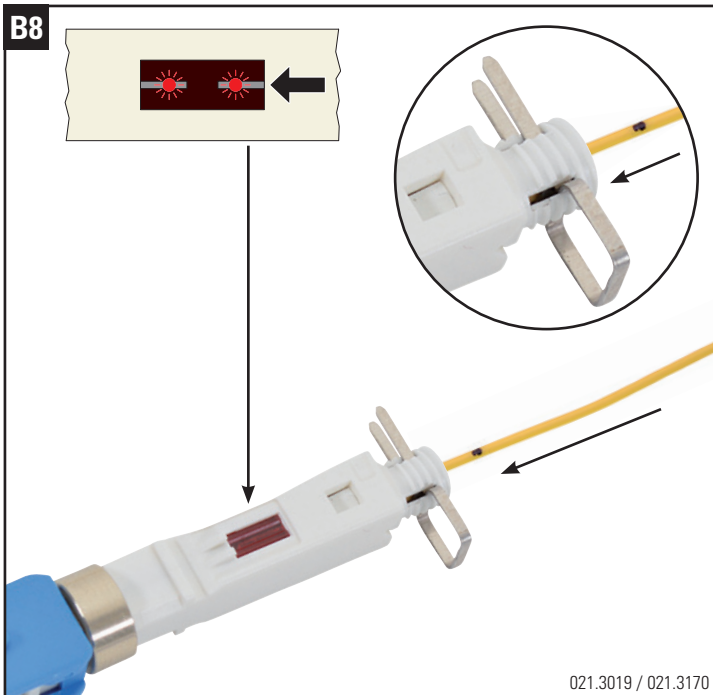


B13

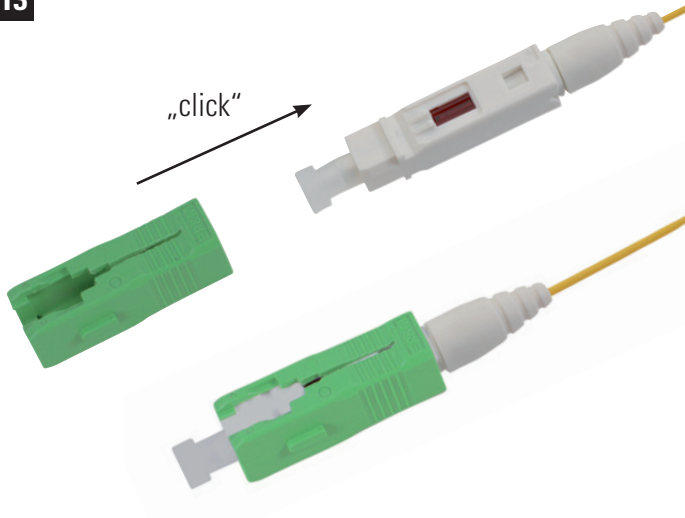

! Stecker vor Gebrauch reinigen /
Clean plug before use


021.3176

C1 DEMONTAGE

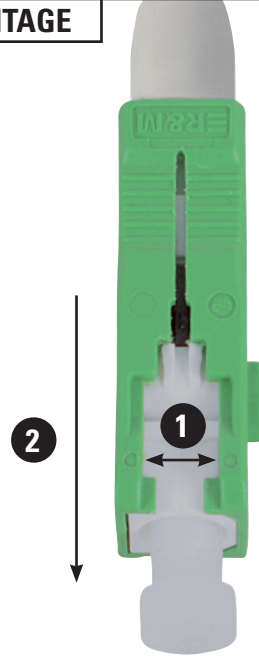


021.3187

C2 DEMONTAGE

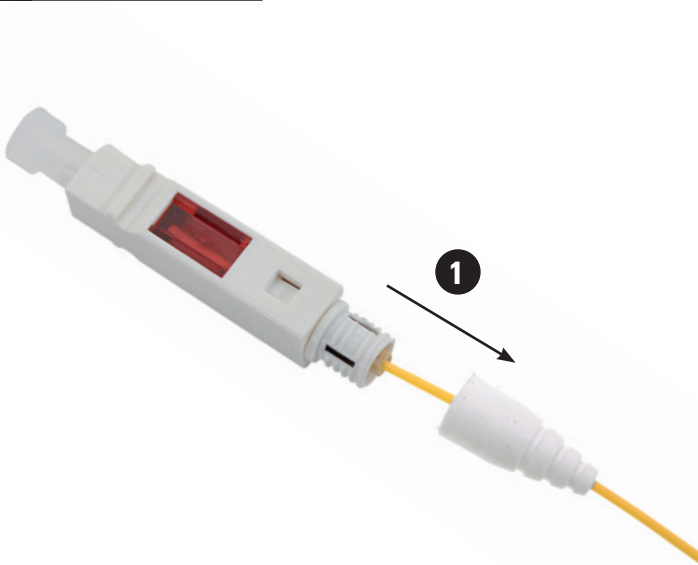


021.3187

C3 DEMONTAGE

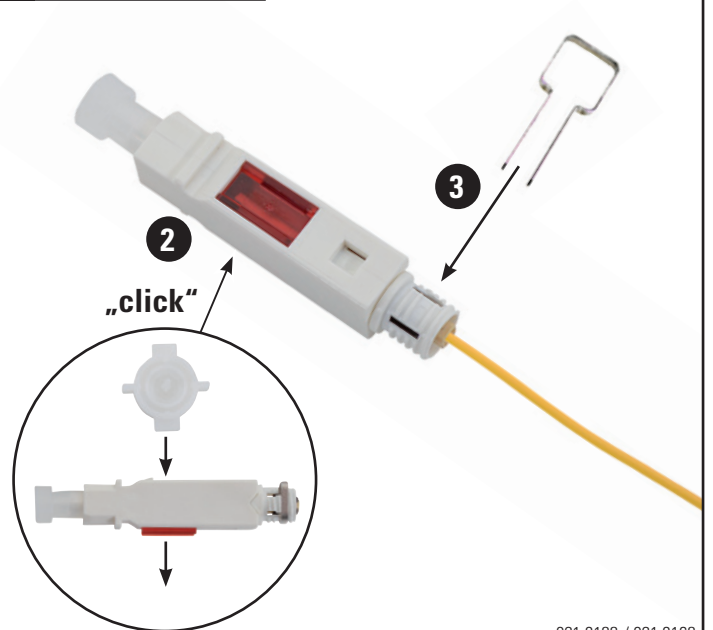

021.3188 / 021.3168

C4 DEMONTAGE

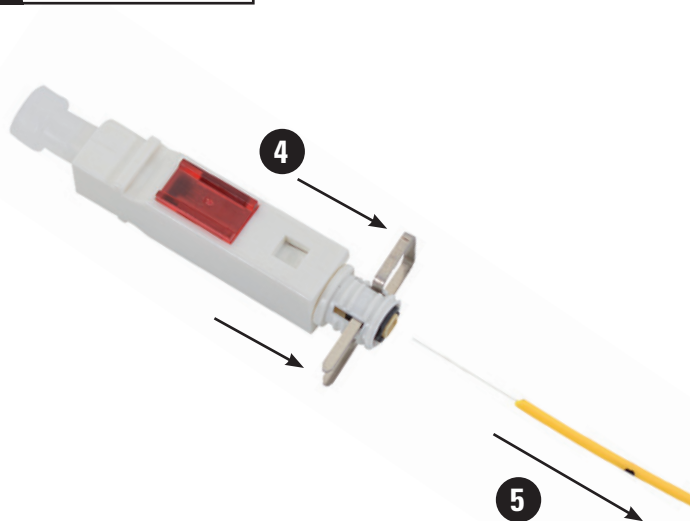

021.3189

www.rdm.com/pif_pigtail

Headquarters

Switzerland

Reichle & De-Massari AG

Binzstrasse 32

CHE-8620 Wetzikon

Telephone HQ +41 (0)44 933 81 11

Telefax HQ +41 (0)44 930 49 41

E-Mail hq@rdm.com

www.rdm.com

